



GRAND PIANO Button + Keyboard Key

A0	GRAND PIANO BRIGHT	GRAND PIANO CONCERT
B0		GRAND PIANO MELLOW
C1	JAZZ PIANO	ROCK PIANO
CH1		ELEC.PIANO
D1	DIGITAL E.PIANO 1	DIGITAL E.PIANO 2
E1		
F1	HARPSICHORD	60S E.PIANO
G1	STRINGS 1	VIBRAPHONE
A1	PIPE ORGAN	STRINGS 2
B1		JAZZ ORGAN
C2		ELEC.ORGAN 1
CH2	ELEC.ORGAN 2	
D2		BASS (LOWER)
E2		
F2		
G2		
A2		
B2		
C3		Upper1 Volume (-)
CH3	Upper1 Volume (+)	Upper1 Octave Shift (-)
D3		Transpose (-)
E3	Upper1 Octave Shift (+)	Transpose (+)
F3		
G3	Touch Response (off)	Touch Response (Light)
A3	Touch Response (Medium light)	Touch Response (Normal)
B3	Touch Response (Medium heavy)	Touch Response (Heavy)
C4		Layer enable/disable
CH4	Upper2 Volume (-)	Upper2 Volume (+)
D4		Upper2 Octave Shift (+)
E4	Upper2 Octave Shift (-)	Upper2 Detune (-)
F4		Upper2 Detune (+)
G4	Upper2 Detune (+)	Upper2 Damper enable/disable
A4	Lower Volume (-)	Lower Volume (+)
B4	Lower Detune (-)	Lower Detune (+)
C5		Lower Damper enable/disable
CH5		
D5		
E5		
F5		
G5		
A5		
B5		
C6		
CH6		
D6		
E6		
F6		
G6		
A6		
B6		
C7		
CH7		
D7		
E7		
F7		
G7		
A7		
B7		
C8		

Tone Selection (A0-B1)
Upper1 Settings (C3-E3)
Transpose (D3-E3)
Touch Response (G3-A3)
Layer settings (C4-E4)
Split settings (C5-E5)



METRONOME Button + Keyboard Key

A0	(+)	(-)
B0		
C1	1	2
CH1	3	4
D1	5	6
E1	7	8
F1	9	Off
G1		
A1		
B1	Metronome Volume (-)	Metronome Volume (+)
C2		
CH2	1	2
D2	3	4
E2	5	6
F2	7	8
G2	9	
A2		
B2		
C3		
CH3		
D3		
E3		
F3		
G3		
A3		
B3		
C4		
CH4		
D4		
E4		
F4		
G4		
A4		
B4		
C5		
CH5		
D5		
E5		
F5		
G5		
A5		
B5		
C6		
CH6		
D6		
E6		
F6		
G6		
A6		
B6		
C7		
CH7		
D7		
E7		
F7		
G7		
A7		
B7		
C8		

Tempo setting (10-key) (A0-B1)
Metronome Beat (C2-E2)

SOUND MODE
SOUND MODE Button + Keyboard Key

A0	OPERA HALL	STANDARD HALL
B0		BERLIN HALL
C1		BRITISH STADIUM
D1	Hall Simulator depth (-)	Hall Simulator depth (+)
E1		
F1	Surround Type 2	Surround Type 1
G1		Chorus (Tone)
A1	Chorus (1)	Chorus (2)
B1	Chorus (3)	Chorus (4)
C2		Brilliance (-)
D2	Brilliance (+)	
E2		
F2		
G2		
A2		
B2		
C3		String Resonance (Tone)
D3	String Resonance (off)	String Resonance (1)
E3	String Resonance (2)	String Resonance (3)
F3		String Resonance (4)
G3	Damper Resonance (Tone)	String Resonance (4)
A3	Damper Resonance (1)	Damper Resonance (2)
B3	Damper Resonance (3)	Damper Resonance (4)
C4	Damper Noise (off)	Damper Noise (Tone)
D4	Damper Noise (2)	Damper Noise (1)
E4		Damper Noise (3)
F4		Damper Noise (4)
G4	Key On Action Noise (Tone)	Damper Noise (4)
A4	Key On Action Noise (1)	Key On Action Noise (2)
B4	Key On Action Noise (3)	Key On Action Noise (4)
C5		Key Off Action Noise (Tone)
D5	Key Off Action Noise (2)	Key Off Action Noise (3)
E5		Key Off Action Noise (1)
F5		Key Off Action Noise (4)
G5		
A5		
B5		
C6		
D6		
E6		
F6		
G6		
A6		
B6		
C7		
D7		
E7		
F7		
G7		
A7		
B7		
C8		

Acoustic Simulator
(A greater setting value increases the level of the effect applied.)

FUNCTION
FUNCTION Button + Keyboard Key

A0	Auto Power Off enable/disable	Factory Reset
B0		
C1	Bluetooth Audio Pairing	Execution
D1	Bluetooth Audio Pairing	Execution
E1	Connection Notification Tone Volume (-)	Connection Notification Tone Volume (+)
F1		Delete Connection History
G1		Save SMF
A1	Save MRF	Load
B1	Delete	Format
C2		B
D2		D
E2		E
F2		L
G2		G
A2		A
B2		B
C3		Equal Temperament
D3	Pure Minor	Pure Minor
E3	Pythagorean	Kirnbeger 3
F3	Mean-Tone	Werckmeister
G3	Bayall	Raal
A3	Saba	Dashti
B3	Segah	Chahagah
C4		Chaukeshi
D4		Gurjari Todl
E4		Stretch tuning on/off
F4		Tuning (-0.1Hz)
G4		Tuning (+0.1Hz)
A4		Tuning (440.0Hz)
B4		Tuning (442.0Hz)
C5	Keyboard Volume (+)	Keyboard Volume (-)
D5	MIDI Song Volume (+)	MIDI Song Volume (-)
E5		Audio Song Volume (-)
F5		Audio Song Volume (+)
G5	Bluetooth Audio Volume (-)	Bluetooth Audio Volume (-)
A5	Bluetooth Audio Volume (+)	Bluetooth Audio Center Cancel enable/disable
B5		Bluetooth Audio Center Cancel enable/disable
C6		Duet Mode (off/on/pan)
D6	Left-side Keyboard Octave Shift (-)	Left-side Keyboard Octave Shift (+)
E6		Right-side Keyboard Octave Shift (+)
F6		Right-side Keyboard Octave Shift (-)
G6		Local Control on/off
A6	Keyboard Channel (-)	Keyboard Channel (+)
B6		Pedal Function
C7		Song Type MIDI
D7		Touch Button Sensitivity (+)
E7	Touch Button Sensitivity (-)	Touch Button Luminescy
F7	Power On Alert enable/disable	Speaker Out disable/enable/Auto
G7		Panel Light setting
A7	Audio Resume enable/disable	Notification Tone Volume (-)
B7	Notification Tone Volume (+)	Notification Tone Set selection
C8		Panel Lock disable/enable/Auto

(Off/5 seconds/30 seconds/60 seconds/120 seconds)

