

# 65 3 5 7 Ca 5 2 K 2 5 3 7 N 0 6 7 6 7 7 5 7 5° 517575

JIMDUNLOP.COM/JHW4

# GET THE UNIQUE AND BITINGLY AGGRESSIVE BAND OF GYPSYS™ FUZZ SOUND IN AN MXR MINI HOUSING WITH A TONE CONTROL FOR SONIC FINE-TUNING. THIS PEDAL COMES EMBLAZONED WITH THE TRIPPY, KALEIDOSCOPIC DESIGNS OF AWARD-WINNING UK-BASED DESIGN CRÜE ILOVEDUST.

## **External Controls**



- 1 OUTPUT knob controls overall volume of effect
- 2 TONE knob shapes EQ of effect
- 3 FUZZ knob controls intensity of fuzz effect
- 4 FOOTSWITCH toggles effect on/bypass (blue LED indicates on)

### **Basic Operation**

#### Power

Authentic Hendrix<sup>™</sup> '69 Psych Series Band of Gypsys<sup>®</sup> Fuzz is powered by the Dunlop ECB003 9-volt adapter or an MXR<sup>®</sup> Brick<sup>™</sup> Series power supply (each sold separately). This pedal cannot be powered by a battery.

#### **Directions**

- 1 Run a cable from your guitar to JHW4's INPUT jack and another cable from JHW4's OUTPUT jack to your amplifier.
- 2 Start with OUTPUT, TONE, and FUZZ controls at 12 o'clock.
- **3** Turn effect on by depressing the footswitch.
- 4 Rotate VOLUME knob clockwise to increase overall volume or counterclockwise to decrease it.
- **5** Rotate TONE knob clockwise to for a brighter sound or counterclockwise for a warmer sound.
- 6 Rotate FUZZ knob clockwise to increase the amount of fuzz or counterclockwise to decrease it.

## **Specifications**

Input Impedance	30 kΩ
Output Impedance	
Max Volume	33 kΩ
Mid Volume	80 kΩ
Noise Floor*	-83 dBV
Bypass	True Hardwire
Current Draw	4.3 mA
Power Supply	9 volts DC

All specifications at 1kHz

\*\*A-weighted, all controls at mid position.