



THE ORIGINAL SINCE 1967.

92503020660REVA

cry baby
GEEZER

GZR95 GEEZER BUTLER CRY BABY[®] WAH

POWER

The Geezer Butler Cry Baby Wah is powered by one 9-volt battery (accessed via the bottom of the pedal), an AC adapter such as the Dunlop ECBO03, or the MXR DC Brick™ and Iso-Brick™ power supplies.

INTERNAL CONTROLS

 Q knob adjusts frequency width of wah effect

 AUTO-RETURN DELAY sets how long effect rings out after rocker returns to heel position

SETUP INSTRUCTIONS

- Run an instrument cable from your guitar to the GZR95's INSTRUMENT jack and another instrument cable from the GZR95's AMPLIFIER jack into your amplifier's input.
- The GZR95 is bypassed (turned off) whenever your foot is off the pedal. To turn it on, simply press toe of rocker down with your foot.
- To access internal controls, remove bottom plate.
- Rotate the Q knob clockwise for a narrower frequency range and more pronounced wah effect or counterclockwise for a wider frequency range and subtler wah effect.

- To increase effect ring-out time, remove bottom plate and rotate AUTO-RETURN DELAY pot counterclockwise (set to 12 o'clock by default). To decrease effect ring out time, rotate the control clockwise.
- Rock your foot back and forth on the pedal to hear the vocal, expressive tones that the Cry Baby Wah is famous for.

SPECIFICATIONS

Impedance

Input	230 K Ω
Output	1 k Ω

Resonant Frequency

Heel Down	400 Hz
Toe Down	2000 Hz

Output Characteristics

Heel Down Gain*	+16 dB / 0 dB
Toe Down Gain*	+17.5 dB / +14.5 dB

Bypass

Automatic Delay**	Buffered 45ms to 560ms
Delay Factory Preset	290ms

Noise Floor***

Bypass	-102 dBV
Heel Down (Effect On)	-99 dB
Toe Down	-90 dBV

Current Draw

2.75 mA

*Q ADJ full CW/CCW

** AUTO-RETURN DELAY ADJ full CW/CCW

*** A-weighted, Q ADJ to 1 o'clock factory setting,
0 dBV = 1VRMS



DUNLOP MANUFACTURING, INC.
P.O. BOX 846 BENICIA, CA 94510 U.S.A.
TEL: 1-707-745-2722 FAX: 1-707-745-2658