 
ROCKMAN®

 
OPERATING INSTRUCTIONS

- Using a large coin, remove the snap lock battery door located on the bottom of the ACE. Install a 9V Alkaline battery as shown in the illustration.
- 2. Plug the ACE lightweight headphones into the HEADPHONE OUTPUT jack.
- Plug your instrument into the GUITAR/BASS INPUT jack. The ACE turns on automatically when you plug into this jack.
- 4. PLAY
- 5. BE SURE TO REMOVE THE GUITAR CORD WHEN YOU FINISH PLAYING TO SAVE THE BATTERY!
- Instead of using a battery, you can insert the ROCK-PWA1 POWER SUPPLY into the external power jack on the side of the ACE. Note: Using the wrong power supply can ruin the unit.
- 7. Note that a weak battery will cause distortion in some settings. Do not leave a dead battery in your ACE!
- 8. Distortion can also result from some instruments with high output levels. This can be corrected by turning down the volume control on your instrument.

GUITAR/METAL ACE

BASS ACE





CONTROL PANEL FUNCTIONS

GUITAR/BASS INPUT

Accepts electric guitar, electric bass, keyboards, high impedance microphones, or other high impedance pickups.

HEADPHONE OUTPUT

This output can drive one pair of stereo headphones, or provide line level signals for a stereo system, a cassette or tape deck, a live sound system, or a studio mixing board.

AUX STEREO INPUT

A stereo hi-fi system, tape deck, radio, or drum machine may be plugged into this input for playing along with recorded music.

VOLUME KNOB

Variable loudness levels from OFF to MAX (WARNING- EXTENDED USE AT LOUD LEVELS MAY BE HAZARDOUS TO YOUR HEARING!)

GUITAR ACE SOUNDS

The GUITAR ACE has three sound settings. CLEAN includes high power sustain and a crystal clear tone with treble boost. SEMI DISTORTION includes sustain, custom EQ, and just enough grit to create a dirty tube amp sound. (You can vary the amount of distortion by using the volume control on your guitar.) HEAVY DISTORTION includes sustain, custom EQ, and serious overdrive to deliver the sound of a maxed-out stack.

The left push button chooses between the CLEAN and DISTORTION sounds. When the left push button is in the CLEAN position, the right push button has no effect. When the left push button is in the DISTORTION position, the right push button chooses between SEMI DISTORTION and HEAVY DISTORTION.


METAL ACE SOUNDS


The METAL ACE settings & operations are the same as the GUITAR ACE. The sound that the METAL ACE produces is brighter with a grinding metallic crunch.

BASS ACE SOUNDS


The basic sound of the BASS ACE includes compression and bass tone boost. The MID BOOST push button adds extra punch to the midrange frequencies. The TREBLE BOOST push button adds extra snap to the high frequencies. These push buttons can be used in any combination to create a wide range of sounds.


TO PLAY ALONG WITH CDs, TAPES, RADIO

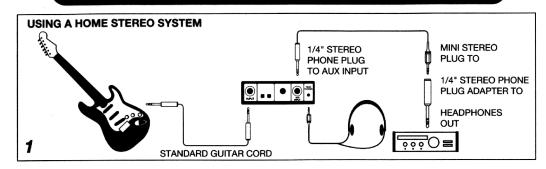


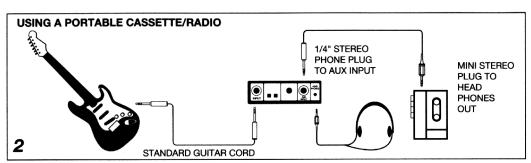

TO RECORD WITH TAPE PLAYER, MIX BOARD, DAT

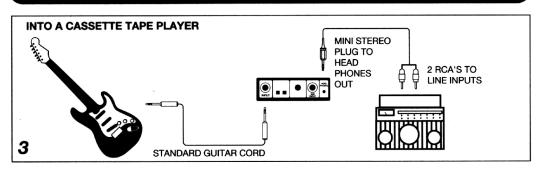

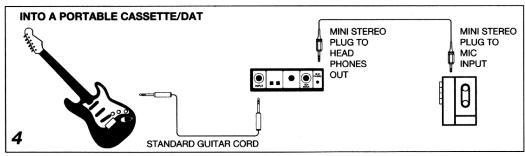


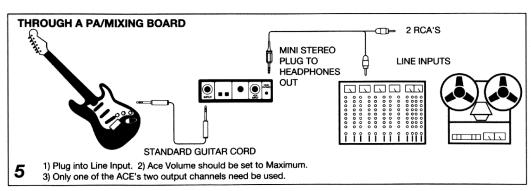


ROCKMAN®

150 Industrial Way P.O. Box 846 Benicia, CA 94510, U.S.A.


TO USE ACCESSORIES WITH THE ACE

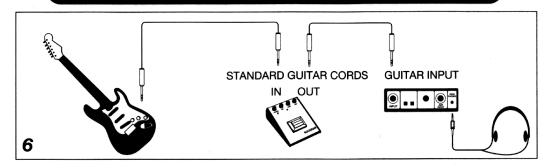



TO PLAY THROUGH A HOME STEREO

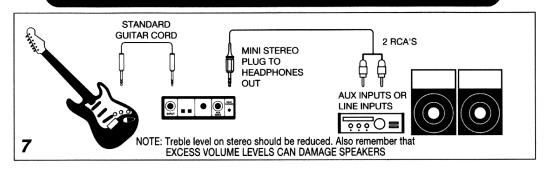

TO PLAY LIVE

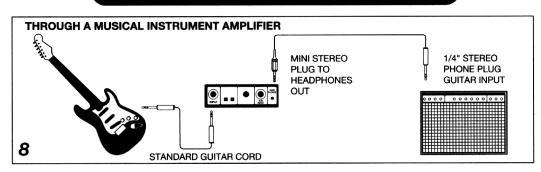

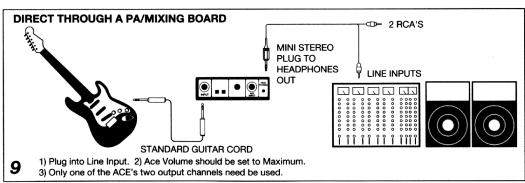

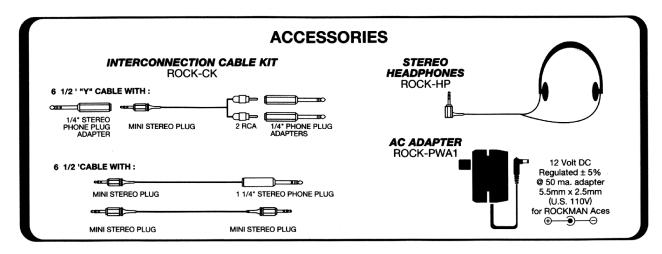

SPECIFICATIONS				
Instrument Input				
MAXIMUM LEVEL		2 VOLTS		
INPUT IMPEDANCE	>1 MEGOHM			
Auxiliary Input/Output				
MAXIMUM LEVEL		1 VOLT RMS		
INPUT IMPEDANCE		>68 KILOHMS		
Output				
MAXIMUM LEVEL		2 VOLTS RMS		
INPUT IMPEDANCE		32 OHMS		
Dimensions		6.2"L x 4.2"W x 1.4"H		
Weight		9 ounces		
Battery Life APPROXIMATELY 25 HOURS WITH 9V ALKALINE BATTERY				

Limited Warranty

Keep this warranty w	ith your sales slip.	. In the event tl	hat your Rockma	n product
needs service work,	you must include a	a copy of your	dated proof of po	ırchase.

Type of Product:	Purchase Date:
Serial #:	

Dunlop Manufacturing, Inc., producers of this ROCKMAN product, take pride in the fact that no product leaves the factory without being quality tested to give you carefree use. ROCKMAN guaranties your product to be free of manufacturing defects for a period of 1 year from the original date of consumer purchase. If this product should become defective within the warranty period ROCKMAN will elect to repair or replace it free of charge.

Special procedures are used to disassemble and service this product. Since there are no user serviceable parts inside the case, circuit damage and voiding of the warranty may result if the case is opened. Should you experience a problem with your product, please contact our Service Center at 707-745-2722 for further instructions.

- Damaged caused by misuse, accident, improper installation, corrosion due to faulty batteries, weather related damages, or use contrary to the instructions furnished with the product are not covered by this warranty.
- Product appearance is not covered by this warranty.
- Shipping costs are not covered by this warranty.
- A dated sales slip must accompany a product being returned for warranty service.
- Please allow 4 weeks for warranty service.
- No other warranty is expressed or implied.
- For more information, write to:

ROCKMAN®

150 Industrial Way; P.O. Box 846 Benicia; CA 94510, U.S.A.