



Dunlop

VOLUME (X) MINI
LOW FRICTION BAND-DRIVE

92503020148REVA



jimdunlop.com

OPERATION MANUAL

DVP4 VOLUME (X)[™] MINI PEDAL

DESCRIPTION

- Controls volume and FX pedals with precision
- Patented Low Friction Band-Drive for durable action
- Fully adjustable rocker tension

FEATURES



AUX output for use with a tuner or to control an FX pedal parameter (toggled by TUNER/EXP switch)



50 kΩ TRIMPOT (internal) sets FX parameter's minimum level when using Expression Mode



TIP/RING switch (internal) switch toggles heel/toe polarity of Expression Mode (set to TIP by default)



TUNER/EXP switch (internal) toggles AUX output functionality (set to EXP by default)

POWER

The DVP4 does not require a power source to operate.

DIRECTIONS

We recommend placing the DVP4 first in your signal chain. Run a cable from your guitar to the DVP4's INPUT jack.

ADJUSTABLE TORQUE

To adjust rocker torque, place pedal in toe-down position. Insert a 1/4" flat blade screwdriver into torque-adjust screw located under heel-end of rocker pedal. Turn clockwise to increase resistance or counterclockwise to decrease resistance.

VOLUME MODE (250 KΩ POT)

- Run a cable from the DVP4's OUTPUT jack to your amplifier.
- With the pedal fully toe-down, set your guitar and amp's maximum desired volume level.
- Moving the rocker toward the heel-down position decreases output level, muting the signal when fully heel-down.
- Optional: To connect a tuner, set TUNER/EXP switch to the TUNER position and run a cable from the AUX output to a tuner. Signal to tuner is always active.

EXPRESSION MODE (10 KΩ POT)

- Set TUNER/EXP switch to the EXP position. Run a stereo or TRS cable from the DVP4's AUX jack to your FX pedal's expression jack.
- With the pedal fully toe-down, set the FX parameter you want to control to the desired maximum level.
- Optional: To set the parameter's minimum level, use internal TRIMPOT. Turn it clockwise to raise minimum level or counterclockwise to lower it. Factory setting is fully counterclockwise.
- Move the rocker pedal toward the heel-down position to lower the FX parameter value within range set by FX pedal and the DVP4's internal TRIMPOT.
- Optional: Use internal TIP/RING switch to reverse the DVP4's heel/toe functionality.



DUNLOP MANUFACTURING, INC.
P.O. BOX 846 BENICIA, CA 94510 U.S.A.
TEL: 1-707-745-2722 FAX: 1-707-745-2658