
Classic Humbucker - Open Core Style Controls:


Volume - Pull for Voice-2

Tone - Pull for Single Coil / Voice-3

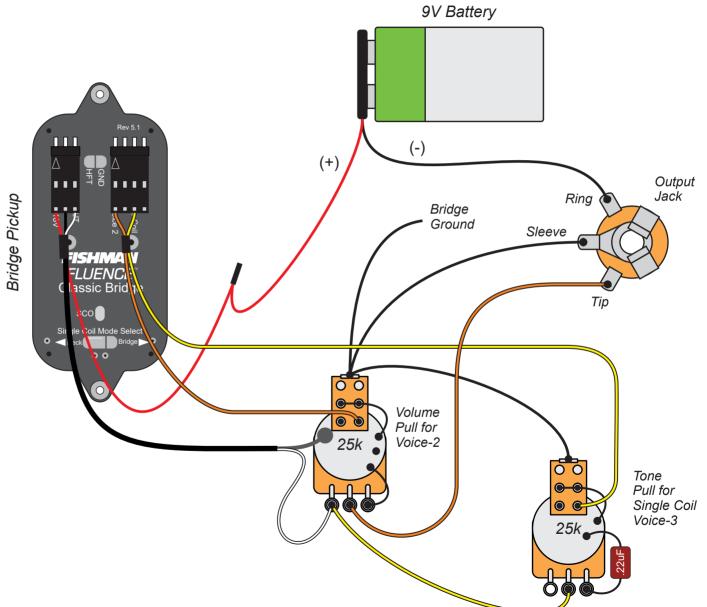


Classic Humbucker Set - Open Core Style Controls: 9V Battery Volume Tone Voice Select (Voice-1, Voice-2, Single Coil / Voice-3) (-) (+) Output Jack Ring Bridge Pickup Neck Pickup Bridge Ground Sleeve ISHMA FLUENC FLUENC lassic Ne k lassic Brid Tip sco sco Sing Coil Mode Selection lle Coil Mode Select Tone Volume 25k 25k Voice Select SPDT ON-OFF-ON Bridge Neck Wire Mini Toggle Pickup Selector Switch Ground: 3-Position Optional but recommended for shielding Bridge Pickup Neck Pickup -Both -

FISHMAN FLUENCE[™] Classic Open Core Humbucker Set Custom Setup - 1 5-Way Super Switch

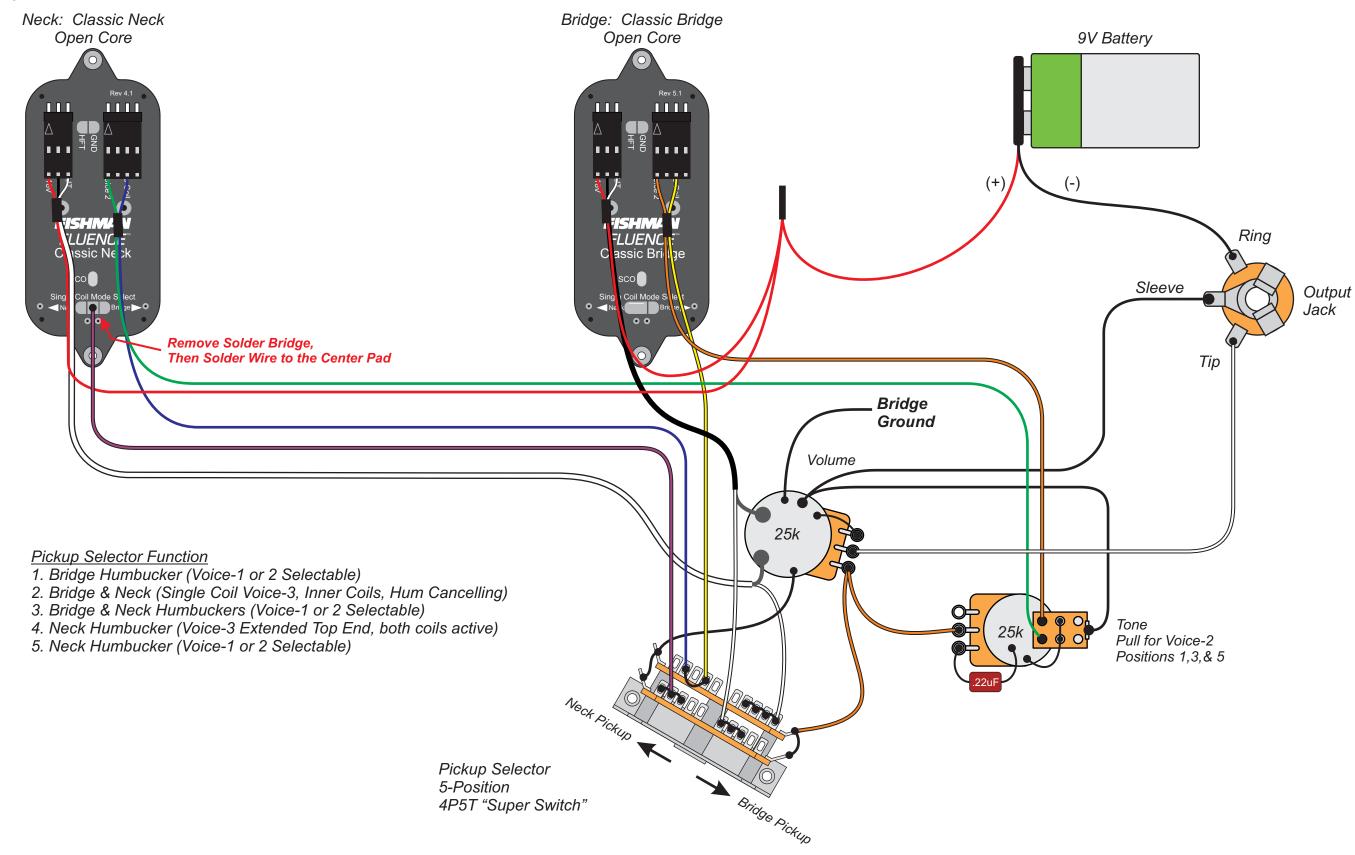

FISHMAN FLUENCE" Classic Open Core Humbucker Set Custom Setup - 1

5-Way Super Switch Neck: Classic Neck Bridge: Classic Bridge Open Core Open Core 9V Battery шш (+) (-) Ring LUENC Cassic Bringe LUENCE Cussic Neck Sleeve Output Jack Tip Bridge Ground Volume 25k Pickup Selector Function 1. Bridge Humbucker (Voice-1 or 2 Selectable) 2. Bridge (Inner Coil) 3. Bridge & Neck (Inner Coils) Tone 4. Neck (Inner Coil)

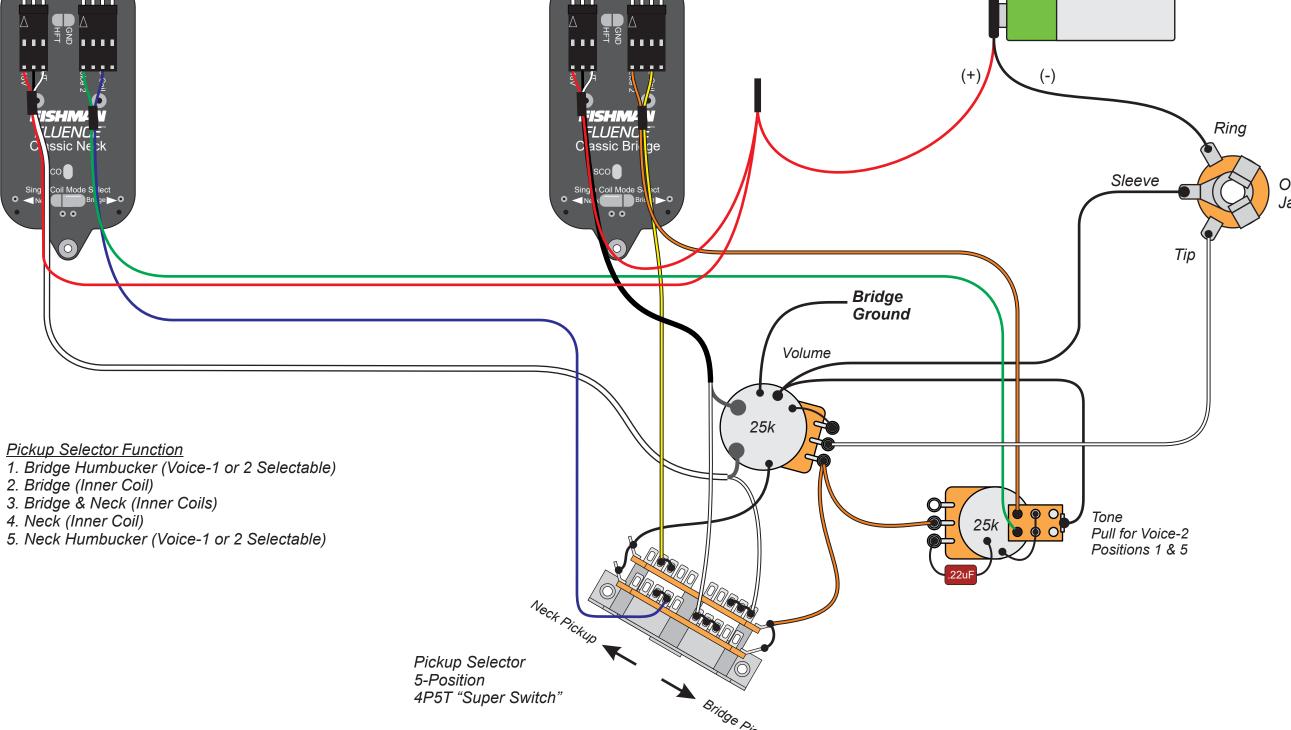


Classic Humbucker Set

Master Volume

Master Tone

Mini Toggle - Voice 2 Select

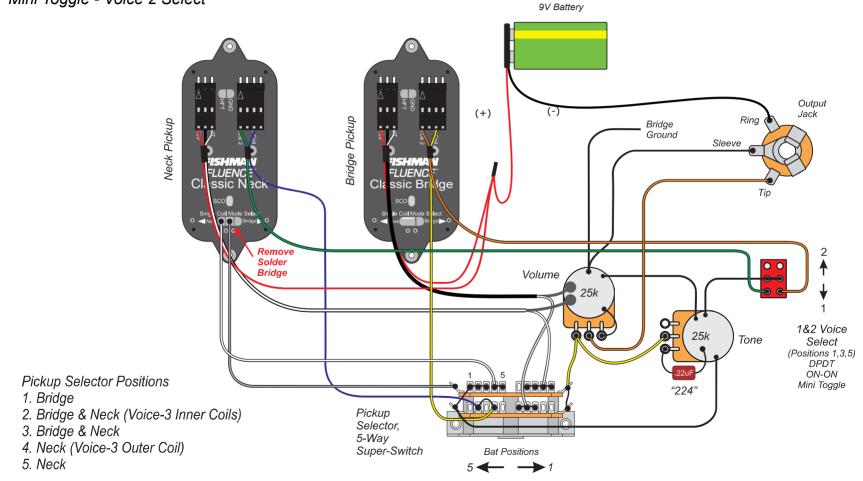


FISHMAN FLUENCE Regulator/Charger Classic Humbucker Set Battery Master Volume Neck Tone - Pull for Neck Voice 3 Bridge Tone - Pull for Bridge Voice 2 Output Jack Ring (-) (+) Sleeve Bridge Ground FLUENCI. FLUENC lassic Bri <mark>v</mark>ge Tip sco sco 📄 le Coil Mode Se ect gle Coil Mode 00 Bridge Neck o o 00 Tone Tone Pull Pull Voice-2 Voice-3 Volume 25k 25k 25k "224" "224" 09 Neck Wire Bridge Wire Neck Pickup -Both Bridge Pickup

Pickup Selector 3-Position

Classic Humbucker Set - Open Core Style Controls: Volume - Pull for Voice-2

9V Battery (-) (+) Output Ring Jack Bridge Pickup Neck Pickup Bridge Ground Sleeve FLUENC FLUENC lassic Ne k lassic Brid Tip sco sco Sing Coil Mode Selet

Net Bridge le Coil Mode Select 00 00 Volume Pull for 25k Voice-2 Bridge Wire Neck Wire **Switch Functions** 9 Pickup Selector 0 6 0 3-Position Position 1 - Neck Position 2 - Neck and Bridge Inner coils (Voice 3) Position 3 - Bridge Neck Pickup ◀ Bridge Pickup Both

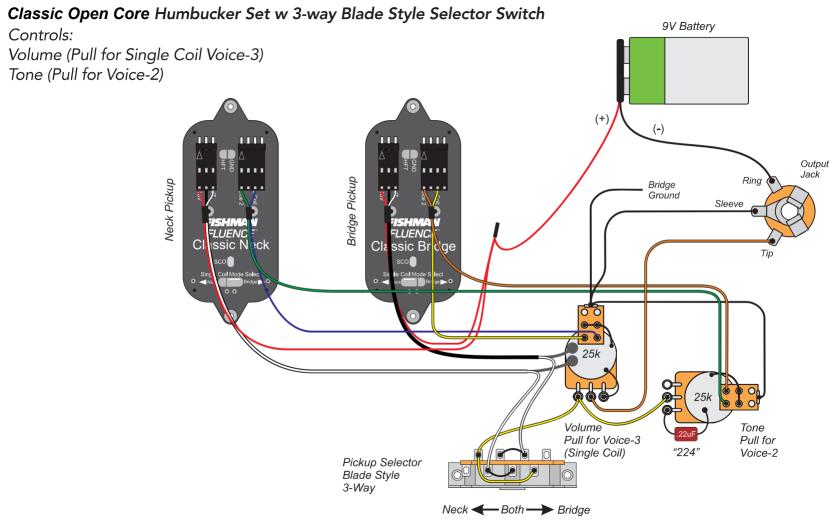

Classic Humbucker Set - Open Core Style Controls: 9V Battery Volume - Pull for Voice-2 Tone - Pull for Single Coil / Voice-3 (-) (+) Output Jack Ring Bridge Pickup Neck Pickup Bridge Ground Sleeve ISHMA V ISHMA FLUENC FLUENC lassic Neck lassic Brid Tip sco sco Sing Coil Mode Select

Net Bridge lle Coil Mode Select 0.0 00 Volume Pull for 25k Voice-2 **ं** ठ Tone Pull for Single Coil Voice-3 25k_ Bridge Neck Wire Wire Pickup Selector 3-Position Switch Ground: Optional but

Neck Pickup •

recommended

for shielding

Bridge Pickup

Both -

Classic Humbucker Set - Open Core Style 2 x Volume, 2 x Tone 9V Battery Neck Tone: Pull for Voice-2, both pickups Bridge Tone: Pull for Single Coil / Voice-3, both pickups (-) (+) Output Jack Ring Bridge Pickup Neck Pickup Sleeve Bridge ISHMA V ISHMAN FLUENC Ground FLUENC lassic Neck lassic Brid Tip sco sco Singl Coil Mode Select gle Coil Mode Seluct 00 Pull Neck Voice-2 25k Vol. 25k Switchcraft Style Neck Pickup Selector Tone 3-way Switch Neck Pickup Pull Bridge Bridge Single Coil / Vol. Voice-3 Both 25k 25k Neck Bridge Bridge Pickup Tone Out

Classic Humbucker Set - Open Core Style Controls: 9V Battery Bridge Volume Neck Volume - Pull for Voice-2 Master Tone - Pull for Single Coil / Voice-3 (-) (+) Output Ring Jack Bridge Pickup Neck Pickup Sleeve Bridge ISHMA ISHMA N Ground FLUENCE FLUENC lassic Ne lassic Bridge Tip sco sco Sing Coil Mode Se et

Net Bridge le Coil Mode Select 0 00 Bridge Vol. Neck Vol. 25k 0 25k Pull Voice-2 Tone **6**/**9** O 25k

Neck Pickup

Pickup Selector

Bridge Pickup

3-Position

Both -

Pull

Single Coil /


Voice-3

Switch Ground: Optional but


recommended

for shielding

FISHMAN FLUENCE[™] Classic Open Core Humbucker Set Custom Setup - 2 (hum cancelling in all positions) 5-Way Super Switch

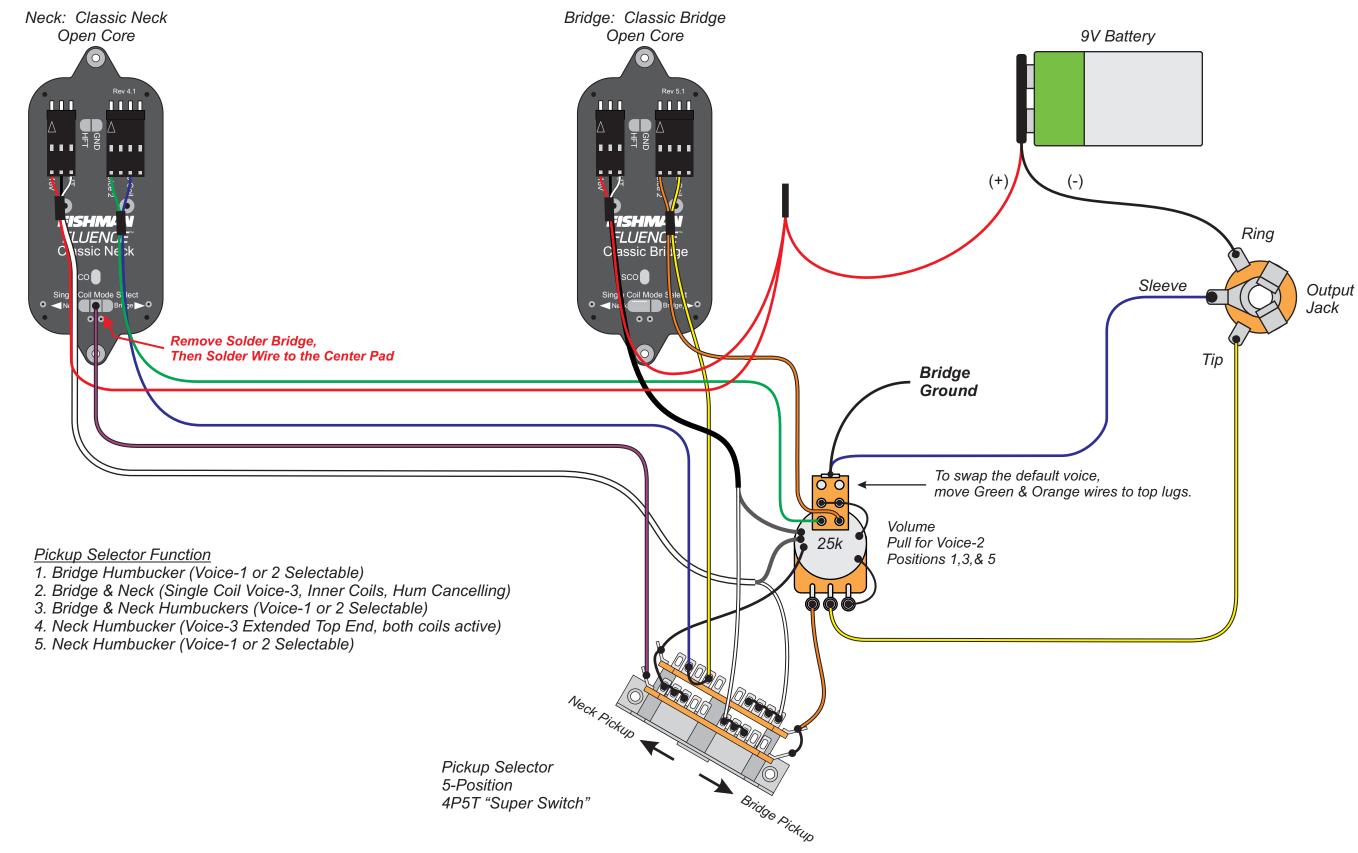

FISHMAN FLUENCE[™] Classic Open Core Humbucker Set Custom Setup - 3 (Position 4 - Neck Single Coil Mode) 5-Way Super Switch

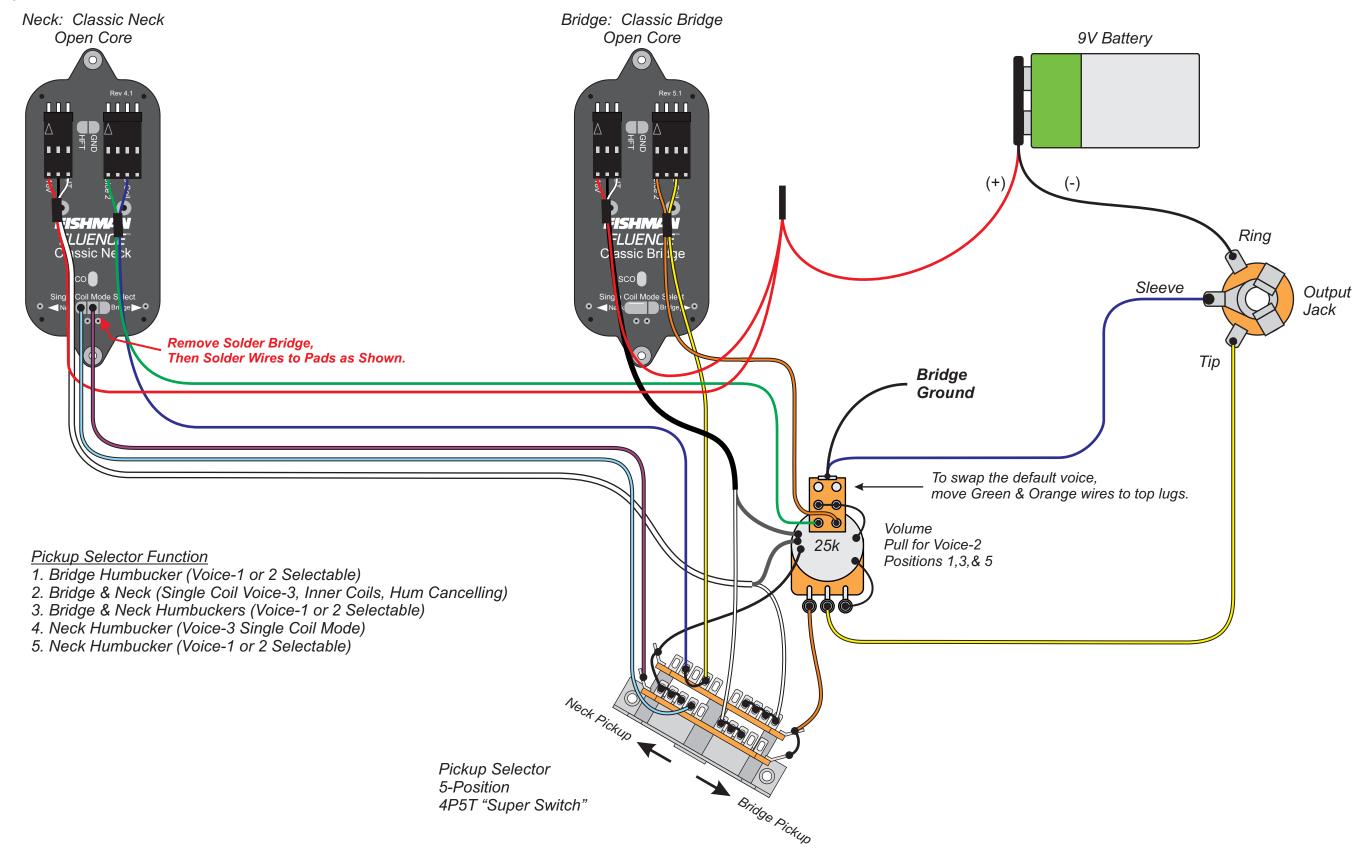

Classic Humbucker Set - Open Core Style (Rev2) Controls: 9V Battery Volume Tone Voice Select (Voice-1, Voice-2, Single Coil / Voice-3) (-) (+) Output Jack Ring Bridge Pickup Neck Pickup Bridge Ground Sleeve ISHMA FLUENC FLUENC lassic Ne k lassic Brid Tip sco sco Sing Coil Mode Sele lle Coil Mode Select Tone Volume 25k 25k Voice Select SPDT Neck ON-OFF-ON Bridge Mini Toggle Wire Wire Pickup Selector Switch Ground: 3-Position Optional but recommended


Neck Pickup -

for shielding

Bridge Pickup

Both -

Classic Humbucker Set - Open Core Style (Rev2) Controls:

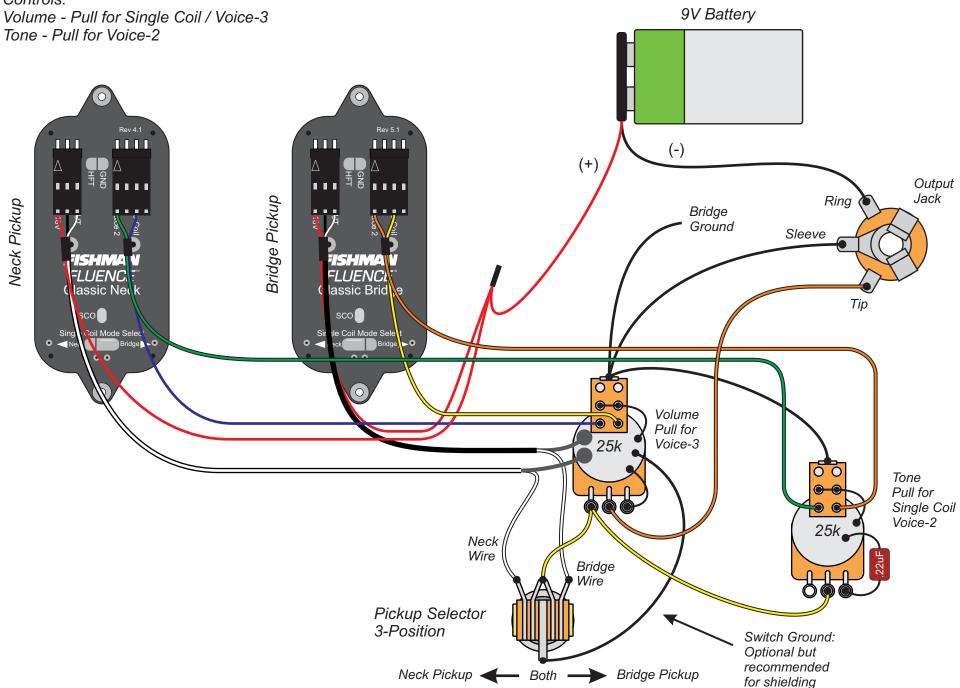

Classic Humbucker Set - Open Core Style Controls: 9V Battery Bridge Volume Neck Volume - Pull for Voice-2 Master Tone - Pull for Single Coil / Voice-3 (-) (+) Output Ring Jack Bridge Pickup Neck Pickup Sleeve Bridge ISHMA N ISHMA Ground FLUENCE FLUENC lassic Neck lassic Bridge Tip sco sco Sing Coil Mode Se et

■ Net Bridt e le Coil Mode Select 0 00 Bridge Vol. Neck Vol. 25k 0 25k Pull Voice-2 Tone **6**/**9** O 25k Switch Ground: Optional but Pickup Selector Pull recommended 3-Position Single Coil / for shielding Voice-3


Neck Pickup

Both -

Bridge Pickup

Classic Humbucker Set - Open Core Style 2 x Volume, 2 x Tone 9V Battery Neck Tone: Pull for Voice-2, both pickups Bridge Tone: Pull for Single Coil / Voice-3, both pickups (-) (+) Output Jack Ring Bridge Pickup Neck Pickup Sleeve Bridge ISHMA V ISHMAN FLUENC Ground FLUENC lassic Neck lassic Brid Tip sco sco Singl Coil Mode Select gle Coil Mode Seluct 00 Pull Neck Voice-2 25k Vol. 25k Switchcraft Style Neck Pickup Selector Tone 3-way Switch Neck Pickup Pull Bridge Bridge Single Coil / Vol. Voice-3 Both 25k 25k Neck Bridge Bridge Pickup Tone Out

Fluence Classic Open Core Voice Selection Wiring via Mini Toggle Switches

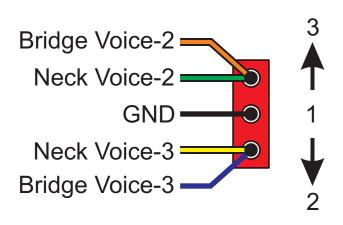

SPDT ON-OFF-ON

