


TROUBLESHOOTING

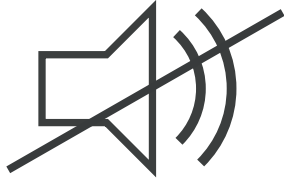

- ✓ Be sure the speaker is fully charged and turned on
- ✓ Make sure your mobile player is connected properly
- ✓ When using the AUX function, make sure the cable is fully connected

ATTENTION

Please do not attempt to disassemble the product

Please do not store the product in a hot or humid environment

Keep the product dry at all times and avoid contact with moisture

Roland Meinel Musikinstrumente GmbH & Co. KG
Musik-Meinel-Straße 1
91468 Gutenstetten
GERMANY



MEINL PERCUSSION MINI CAJON SPEAKER

INFO SHEET




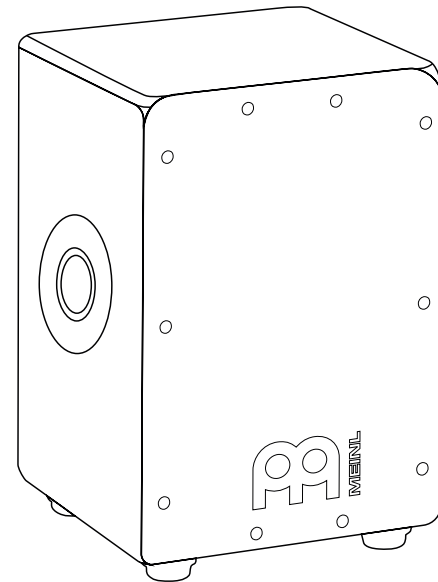


DIAGRAM OF CONTROL PANEL

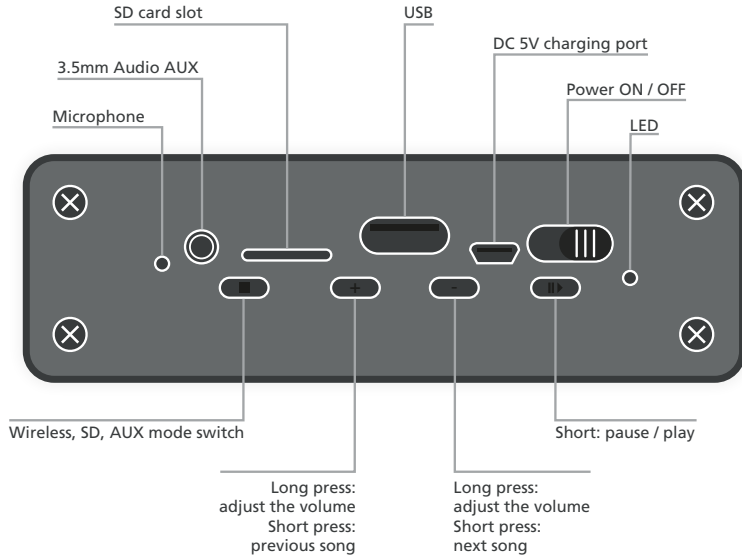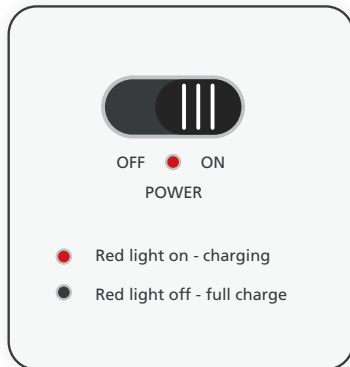

HOW TO CHARGE

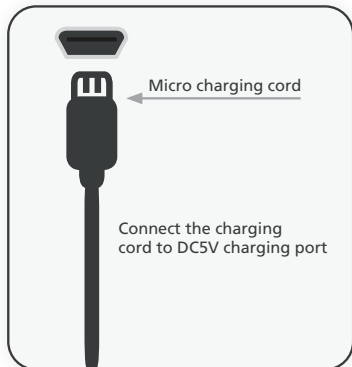

WIRELESS SETTINGS

