

BB535R

CRYBABY®
BB535

CRY BABY® BB535 WAH REISSUE

BASIC OPERATION



CONTROLS

1. FOOTSWITCH turns pedal on/off. Green LED indicates ON. Push the toe of the pedal down until you feel a “click.” Rock your foot back and forth to shape the effect that the Cry Baby Wah has on the tone of your instrument instantaneously.
2. BOOST SELECTOR switch increases output as set by the VOLUME knob. Red LED indicates boost is active.
3. BOOST CONTROL knob sets gain boost up to +12dB.
4. WAH RANGE SELECTOR switch selects frequency range.

POWER

The Cry Baby® BB535 Wah Reissue is powered by one 9-volt battery (accessed via underside of pedal), the Dunlop ECB003 9-volt adapter, or an MXR® Brick™ series power supply.

SPECIFICATIONS

IMPEDANCE

Input Impedance	1 MΩ
Output Impedance	1 kΩ

WAH RANGE SELECTOR

1st Position (Full CCW)	444 to 2117 Hz
2nd Position	385 to 1888 Hz
3rd Position	300 to 1468 Hz
4th Position	248 to 1217 Hz
5th Position	214 to 1050 Hz
6th Position	173 to 847 Hz

Boost Control Range	0 to 12dB
Bypass	Buffered
Current Draw	12 mA
Power Supply	9 volts DC
