

SOUND Mode

This is the default mode on booting up. The display shows the current selected Sound number. < & > buttons change the Sound to the next or previous ones. Number input buttons enter Sound numbers.

STYLE Mode

The display shows the current selected Style number. < & > buttons change the Style to the next or previous ones. Number input buttons enter Style numbers. In this mode, you can play music with accompaniment.

CHORD

With CHORD button engaged, you get full music accompaniment. See Chord Detection to understand how to input chords. Without CHORD, you get a Rhythm-only accompaniment.

AutoChord

With AutoChord engaged, you get full music accompaniment and chords change automatically. It is possible to change the chord change characters by keybed commands.

A/B Button

This button flips between two different song sections while a Style is playing.

Sync-Start

When engaged, the accompaniment can start right on your first hit on the key(s).

SONG Mode

The display shows the current selected Song number. < & > buttons change the Song to the next or previous ones. Number input buttons enter Song numbers.

Melody Cancellation

This keyboard has the ability to cancel the melody line from the onboard Songs, using a Function keybed command. This helps you practice the right hand playing.

Specifications

Keyboard 37 Mini	Other Features Metronome, Sustain, Song Melody On/off, Style Sync-start, Octave, Transpose and Tuning adjustments
Display LED	Connectivity 1 x USB-C (Power, MIDI & audio) 1 x Stereo Mini Headphones Output
Max. Polyphony 64	Speakers 1 x 8 cm
Sound 200	Amplifier 2.5W
Style 120	Power USB-C 5V or 4 x AA Batteries
Song 100	Dimensions 490 x 186 x 60 mm
Tempo 5-320	Weight 1.08kg


* All specifications and appearances are subject to change without notice.

Function

Press and hold C1, C#1 and D#1 keys at the same time to engage Function parameter access. Release the keys to disengage Function.

Note:

It will exit Function access if there is no operation in 3 seconds.

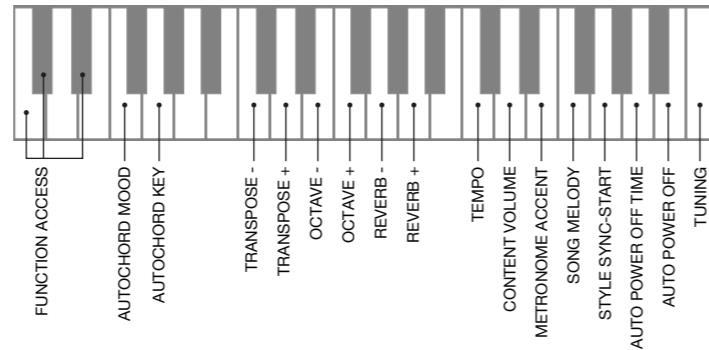

No.	KEY	PARAMETER	RANGE	DESCRIPTION
1	C4	TUNING	-50 ~ +50	Press this key and then use < & > buttons to change the keyboard tuning by a 2-cent step.
2	B3	AUTO POWER OFF	On, off	Press this key to engage and disengage the auto-power off alternately.
3	A3	AUTO POWER OFF TIME	5, 10, 15, 30, 60, 120 (mins)	Press this key to set the duration for which there is no input until the power turns off automatically.
4	G3	STYLE SYNC-START	On, off	Press this key to turn Sync-start on and off alternately.
5	F3	SONG MELODY	On, off	Press this key to turn the Song main melody track on and off alternately for practicing.
6	E3	METRONOME ACCENT	0 ~ 16	Press this key and then use < & > buttons to change the accent for Metronome.
7	D3	CONTENT VOLUME	0 ~ 15	Press this key and then use < & > buttons to adjust volume for Metronome, Style and Song.
8	C3	TEMPO	5 ~ 320 (BPM)	Press this key and then use < & > buttons to adjust tempo for Metronome, Style and Song.
9	A2 & G2	REVERB LEVEL	0 ~ 10	Press A2 to increase or press G2 to decrease the global reverb level.
10	E2 & F2	OCTAVE UP & DOWN	-2 ~ +2	Press F2 to increase or press E2 to decrease the keyboard octave setting.
11	C2 & D2	TRANSPOSE UP & DOWN	-12 ~ +12	Press D2 to increase or press C2 to decrease the keyboard transposition setting. Press the two buttons together to set back to default.
12	G1	AUTOCHORD KEY	-5 (G) ~ +6 (#F)	Press this key and then use < & > buttons to shift the AutoChord root key setting. Press the two buttons together to set back to default.
13	F1	AUTOCHORD MOOD	Intelligent, free, dark	Press this key to rotate through 3 different mood settings, the chords selected in the music change accordingly.

MINI KEYBOARD

OWNER'S MANUAL

THE FCC REGULATION WARNING (for the USA)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- If items such as cables are included with this equipment, you must use those included items. Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

Keep this manual

After reading this manual, please keep it for later reference.

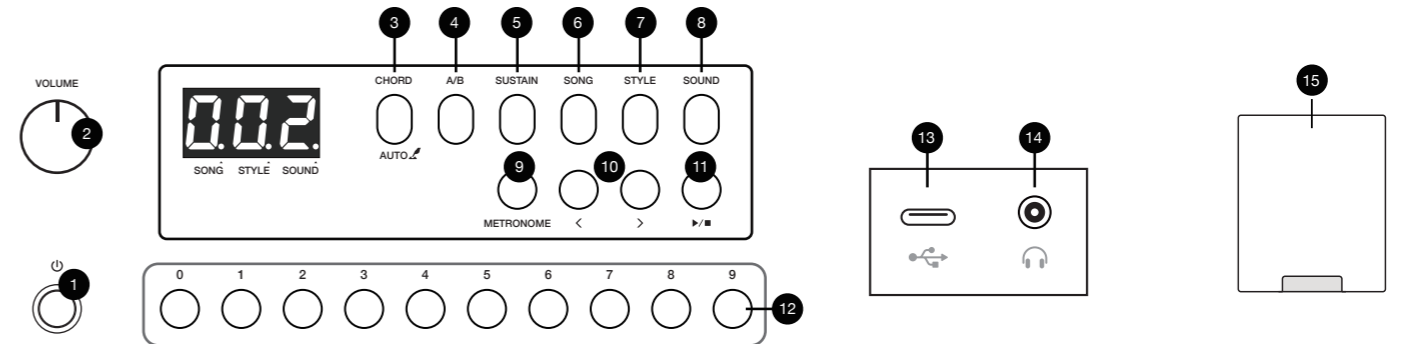

1. Operation

- Press this button to turn Power on or off.
Note: In order to save energy, the instrument will automatically shut down after 30 minutes of not being used. You can turn off the power protection by using a keyboard command.
- Turn this knob clockwise to increase or counter-clockwise to decrease the output volume.
- Press this button to engage music accompaniment on or off. Long-press this button to engage AutoChord, then press to exit.
- In Style playing, switch between section A and B.
- Press this button to turn the sound Sustain on or off.
- ~ 8 Press any of these buttons to enter the labelled mode.
- Press this button to start or stop Metronome.

PRECAUTIONS

Location

- Using the unit in the following locations can result in a malfunction.
- In direct sunlight
 - Locations of extreme temperature or humidity
 - Excessively dusty or dirty locations
 - Locations of excessive vibration
 - Close to magnetic fields

Power Supply

Please connect the designated USB power adapter to an AC outlet of the correct voltage. Do not connect it to an AC outlet of voltage other than that for which your unit is intended. When Battery power is low, the instrument may not operate properly. For example, the LED display looks dark, or the output volume drops. If this occurs, replace the batteries with fresh ones.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds or flammable polishes.

Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Keeping foreign matter out of your equipment

Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock. Be careful not to let metal objects get into the equipment.

- Press either of these buttons to select the next or previous Sound, Style or Song content, depending on the current selected mode. Combined with other buttons, these buttons also change various parameters.
- Press this button to start or stop the current selected Style or Song.
Note: Under the default Sound mode, Style gets played back.
- Enter a 3-digit number to access the desired content number, Sound, Style or Song depending on the currently selected mode.
Note: When inputting a 1-digit number or 2-digit, type the number and wait for a few seconds till it's recognized by the keyboard.


2. Back & Bottom Panels

- USB Power Input: For connecting an USB-C cable to power the keyboard.
- Phones Output: For connecting headphones or earphones.
- Battery Compartment: For installing 4 x AA batteries to power the keyboard.







Chord Detection

When CHORD is engaged, the keybed area from C1 to C2 becomes the chord input area. This keyboard can detect chords by one, two keys or three, offering major, minor, seventh, and minor seventh chords. Refer to the relevant image below for details.



Chord Root **Chord Type**

 <p>C</p>	<p>Major Triad Only press the root note on the keyboard.</p>
 <p>Cm</p>	<p>Minor Triad Press the root note and the nearest left black key simultaneously.</p>
 <p>C7</p>	<p>Seventh chord Press the root note and the nearest left white key simultaneously.</p>
 <p>Cm7</p>	<p>Minor seventh chord Press the root note and the nearest left white and black keys simultaneously.</p>

Sound List	
PIANO	
1	Acoustic Grand Piano
2	Piano Dark
3	Octave Piano
4	Octave Piano 2
5	Piano & Choir
6	Grand Piano / W
7	Analog E.Piano
8	Bright Piano
9	Bright Piano 2
10	Chorus Piano
11	Piano & Vibraphone
12	Electric Grand Piano
13	Electric Grand Piano / W
14	Honky-Tonk Piano
15	Honky-Tonk Dark
E.PIANO	
16	E.Piano
17	Stereo E.Piano
18	50's E.Piano
19	E.Piano / W
20	E.Piano 2 / W
21	E.Piano 2
22	E.Piano 3
23	Detuned E.P.
24	Harpsichord
25	Harpsichord / W
26	Harpsichord Octave
27	Harpsichord Octave 2
28	Digital E.Piano
29	Clavichord
30	Stereo Clavichord
CHROMATIC PERCUSSION	
31	Celesta
32	Celesta 2

33	Reecho Bell
34	Glockenspiel
35	Children's Song
36	Analog Bell
37	Music Box
38	Vibraphone
39	Vibraphone / W
40	Vibraphone & Bell
41	Marimba
42	Sine Marimba
43	Wood Drum
44	Rotating
45	Xylophone
46	Tubular Bells
47	Dulcimer
ORGAN	
48	Drawbar Organ
49	Stereo Drawbar Organ
50	Percussive Organ
51	Percussive Organ Detuned
52	Rock Organ
53	Church Organ
54	Octave Church Organ
55	Octave Church Organ 2
56	Finale
57	Digital Organ
58	Analog Organ
59	Reed Organ
60	Stereo Reed Organ
ACCORDION	
61	Accordion
62	Accordion 2
63	Stereo Accordion
64	Harmonica
65	Dark Harmonica

Style list	
BEAT & POP	
1	8 Beat 1
2	8 Beat 1-2
3	8 Beat2
4	60's 8 Beat
5	60's 8 Beat-2
6	8 Beat Ballad
7	8 Beat Ballad-2
8	8 Beat Rock
9	8 Beat Rock-2
10	16 Beat
11	16 Beat-2
12	16 Beat Pop
13	16 Beat Pop-2
14	Pop Shuffle
15	Pop Shuffle-2
16	Ballad
17	Slow Ballad
18	Slow Ballad-2
ROCK	
19	Rock
20	Rock-2
21	Pop Rock
22	Pop Rock-2
23	Fast Rock
24	Fast Rock-2
25	Slow Rock
26	Slow Rock-2
27	Rock & Roll
28	Rock & Roll-2
29	Blues Boogie
30	Blues Boogie-2
31	Blues
32	Blues-2
33	Blues Shuffle

34	Blues Shuffle-2
35	Rock Shuffle
36	Rock Shuffle-2
37	Charleston
DANCE	
38	Disco
39	Disco-2
40	Disco Funk
41	Disco Funk-2
42	Dance
43	Dance-2
44	House
45	House-2
46	Rap
47	Rap-2
48	Euro Beat
49	Euro Beat-2
50	Hip Hop
51	Hip Hop-2
52	Techno
53	Techno-2
SOUL & FUNK	
54	Funky Pop
55	Funky Pop-2
56	Jazz Funk
57	Jazz Funk-2
58	Cool Funky
59	Soul
60	Soul Blues
61	R & B
62	6/8 Gospel
63	6/8 Gospel-2
64	Pop Groove
JAZZ	
65	Swing
66	Swing-2

67	Cool Jazz
68	Cool Jazz-2
69	Pop Swing
70	Pop Swing-2
71	Swing Fox
72	Swing Fox-2
73	Big Band
74	Big Band-2
75	Ragtime
76	Ragtime-2
77	Dixieland
78	Dixieland-2
79	Quick Step
80	Quick Step-2
COUNTRY	
81	Country
82	Pop Country
83	Country Rock
84	3/4 Country
85	Country Shuffle
86	Country Quick Step
LATIN	
87	Cha Cha
88	Cha Cha-2
89	Pop Cha Cha
90	Pop Cha Cha-2
91	Rhumba
92	Rhumba-2
93	Pop Rhumba

94	Pop Rhumba-2
95	Bossa Nova
96	Bossa Nova-2
97	Tango
98	Tango-2
99	Jazz Samba
100	Reggae
101	Reggae-2
102	Pop Reggae
TRADITIONAL	
103	March
104	German March
105	6/8 March
106	Polka
107	Pop Polka
108	Waltz
109	Slow Waltz
110	Vienna Waltz
111	Musette
PIANIST	
112	Piano 8 Beat
113	Piano Ballad
114	Piano Boogie
115	Piano Jazz
116	Piano Swing
117	Piano Twist
118	Piano March
119	Piano 6/8 March
120	Piano Waltz

GUITAR	
66	Nylon Guitar
67	Chorus Nylon Guitar
68	Stereo Nylon Guitar
69	Steel Guitar
70	12 String Guitar
71	Jazz. Guitar
72	Clean Guitar
73	Stereo Clean Guitar
74	Chord Clean Guitar
75	Muted Guitar
76	Overdrive Guitar
77	Distortion Guitar
78	5Th Distortion
79	5Th Distortion 2
80	Analog Distortion
81	Analog Distortion Wah
82	Guitar Harmonics
BASS	
83	Acoustic Bass
84	Acoustic Bass 2
85	Jazz Style
86	A.Bass & Mute G.T.
87	Finger Bass
88	Velocity Bass
89	Pick Bass
90	Mute Pick Bass
91	Fretless Bass
92	Slap Bass
93	Slap Bass 2
94	Synth Bass
95	Synth Bass 2
96	Synth Bass 3
STRINGS & ORCHESTRAL	
97	Violin
98	Violin 2

99	Viola
100	Cello
101	Contrabass
102	Tremolo Strings
103	Pizzicato Strings
104	Orchestral Harp
105	Timpani
106	Timpani 2
107	Strings Ensemble
108	Strings Ensemble 2
109	Stereo Strings
110	Synth Strings
111	Stereo Synth Strings
112	Stereo Synth Strings 2
113	Analog String
114	Slow Strings
115	Slow Strings 2
116	Choir Aahs
117	Stereo Aahs
118	Stereo Aahs 2
119	Synth Voice
120	HK 80's
121	Orchestra Hit
BRASS	
122	Trumpet
123	Dark Trumpet
124	Wah Trumpet
125	Trombone
126	Tuba
127	Muted Trumpet
128	Horn
129	Stereo Synth Brass
130	Brass Ensemble
131	Majestic Unison
132	Synth Brass
133	Synth Brass 2

134	Analog Brass
135	Analog Brass 2
136	Dynamics Analog Brass
137	Octave Synth Brass
WOODWIND	
138	Soprano Sax
139	Alto Sax
140	Tenor Sax
141	Baritone Sax
142	Oboe
143	English Horn
144	Bassoon
145	Clarinet
146	Piccolo
147	Flute
148	Flute 2
149	Recorder
150	Pan Flute
151	Shakuhachi
152	Shakuhachi 2
153	Whistle
154	Ocarina
SYNTH	
155	Square Lead
156	Analog Lead
157	Lead Sine
158	Analog Electric
159	Sine Solo
160	Sawtooth Lead
161	Stereo Sawtooth
162	80's Synth
163	Analog Signal
164	Calliope Lead
165	Grand
166	Chiff Lead
167	Fruity Lead

168	Modulation Distortion
169	Analog Filter
170	Bass & Lead
171	New Age Pad
172	Praise
173	Dunhuang
174	Phase Shift
175	Warm Pad
176	Analog Pad
177	Electric Pad
178	Metallic Pad
179	Dream
180	Background
ETHNIC	
181	Sitar
182	Banjo
183	Shamisen
184	Koto
185	Kalimba
186	Bagpipe
187	Fiddle
188	Shania
SFX	
189	Reverse Cymbal
190	Breath Noise
191	Seashore
192	Bird Tweet
193	Telephone Ring
194	Helicopter
195	Applause
196	Gunshot
197	Fall
DRUMS	
198	Standard Drum Set
199	Rock Drum Set
200	Electronic Drum Set

Song List	
CLASSIC	
1	Chanson Du Toreador
2	Meditation
3	Wiegenlied
4	A Lover's Concerto
5	Whispering Hope
6	O Sole Mio
7	Auf Flugeln Des Gesanges
8	From The New World
STANDARD	
9	Deck The Halls
10	Old Folks At Home
11	Oh! Susanna
12	Jeanie With The Light Brown Hair
13	Long Long Ago
14	My Old Kentucky Home
15	Turkey In The Straw
16	Carry Me Back To Old Virginny
17	The Blue-Bells Of Scotland
18	Jingle Bells
19	Battle Hymne Of The Republic
20	Ode To Joy
21	La Cucaracha
22	Yellow Rose Of Texas
23	The Wabash Cannon Ball
24	Dreaming Of Home And Mother
25	Ring Ring De Banjo
26	Die Forelle
FOLK	
27	When The Saints Go Marching In
28	Twinkle Twinkle Little Star
29	I've Been Working On The Railroad
30	With Games
31	Way Home

32	Yankee Doodle
33	My Darling Clementine
34	Danny Boy
35	Ei Condor Pasa
36	Wiegenlied 2
37	Old Black Joe
38	The Quilting Party
39	The Colorado Trail
40	Shenandoah
41	The Cowboy's Lament
42	Barbara Allen
43	Careless Love
44	Sweet Betsy From Pike
45	Jesse James
46	Skip To My Lou
47	Home On The Range
48	This Old Man
49	Polly Wolly Doodle
50	Home Sweet Home
51	Mary Had A Little Lamb
52	Blue Bird Waltz
PIANO & KEYBOARD	
53	Kaiser Walzer
54	Hanon Piano Fingering 1
55	Hanon Piano Fingering 2
56	Hanon Piano Fingering 3
57	Hanon Piano Fingering 4
58	Hanon Piano Fingering 5
59	Hanon Piano Fingering 6
60	Hanon Piano Fingering 7
61	Basic Tutorial Beyer Piano 8
62	Basic Tutorial Beyer Piano 12
63	Basic Tutorial Beyer Piano 13
64	Basic Tutorial Beyer Piano 14
65	Basic Tutorial Beyer Piano 15

66	Basic Tutorial Beyer Piano 16
67	Basic Tutorial Beyer Piano 18
68	Basic Tutorial Beyer Piano 19
69	Basic Tutorial Beyer Piano 20
70	Basic Tutorial Beyer Piano 21
71	Basic Tutorial Beyer Piano 29
72	Basic Tutorial Beyer Piano 45
73	Basic Tutorial Beyer Piano 50
74	Basic Tutorial Beyer Piano 52
75	Basic Tutorial Beyer Piano 55
76	Basic Tutorial Beyer Piano 59
77	Beyer Eight Degrees Jump Etude
78	Basic Tutorial Beyer Piano 65
79	Basic Tutorial Beyer Piano 66
80	Old Folks At Home (Piano)
81	Basic Tutorial Beyer Piano 70
82	Basic Tutorial Beyer Piano 73
83	Larghetto
84	Duke Aria From "The Rigoletto"
85	The Happy Farmer
86	Dance Of The Four Swans From "Swan Lake"
87	Jesus Saviour Pilot Me
88	Old Macdonald Had A Farm
89	2-Part Invention No.13 In A Minor BWV 784
90	Musette
91	Bourree
92	Carl Czerny 599 NO92
93	Away In A Manger
94	Marriage Of Figaro
95	Angels We Have Heard On High
96	Did You Ever See A Lassie
97	Old France
98	Alfredo And Violetta Column Tower Duet
99	Als Die Alte Mutter Mich Noch lehrte Singen
100	The Angels Singing

* The contents of this manual apply to the latest product specifications at the time of publishing. To obtain the latest version of this manual, please download from our website.