

JOYO

www.joyochina.cn

话筒放大器

DM-5 用户使用说明




一、注意事项

- 1.切勿擅自拆卸、改装、修理机器,以免发生短路。
- 2.勿在高温、潮湿、污浊、强烈震动处使用机器。
- 3.勿将机器摔落,或落在坚硬物体表面,以免机器操作失常。
- 4.勿用酒精等稀释性液体擦洗机器表面,以免机器受损。

二、规格参数

频率范围:10Hz-40kHz(±0.3 dB)
增益:20-30 dB(负载1KΩ)
最大输出电平(0.5%THD):4.5 dBV(2.6 V)
输出噪声级:10μV(JIS-A)
供电:48V,符合IEC 61938
电阻抗:135Ω
推荐负载阻抗:>1KΩ
电流消耗:2.9mA
连接:3针公/母XLR连接器
尺寸:直径:19mm
长度:95.5mm
重量:80克
随机附件:说明书

三、产品示意图及介绍

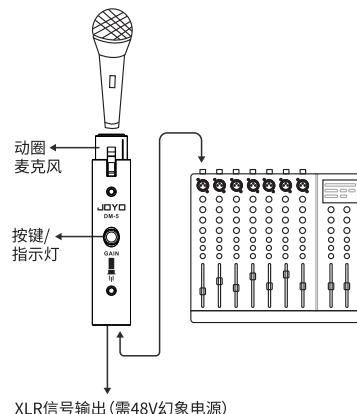

* 点按按键可以切换放大增益,指示灯颜色指示当前增益。绿灯时为20dB,蓝灯时为30dB。

供电

为了确保正常操作,DM-5需要一个根据IEC 61938提供48V的幻象电源。



损坏风险

不要将DM-5连接到任何除幻象电源(输入幻象电源或外部IEC标准幻象电源)以外的电源,使用平衡电缆,工作室级连接器仅符合IEC 268-12。这是确保安全可靠运行的唯一途径。

安全与维护



损坏风险

请确保您的DM-5所连接的设备符合国家的安全法规,并配有接地引线。

本产品符合合格声明中列出的标准。技术资料如有更改,恕不另行通知。



卓乐产品服务政策

一、在正常使用产品过程中,如果产品出现非人为损坏的性能故障,自购买之日起,消费者享有保修服务,保修期为12个月。

二、有下列情况之一者,消费者不能享受保修权益。

1、人为损坏;2、超过保修期;3、无保修卡及有效发票,但能够证明产品在保修期内的除外;4、保修卡与产品型号不符,或保修卡被涂改;5、未按说明书要求使用、维护、保养而造成产品损坏;6、未经卓乐公司授权,擅自拆卸、维修产品、或浸水、摔坏产品;7、其他不可抗力造成的损坏。

三、卓乐服务信息
消费者服务热线:0755-29765390
更多信息请访问: www.joyochina.cn



卓乐产品保修卡

产品型号	SN号码	
用户信息	姓名	购机日期
	电话	
	地址	
	发票号码	
销售单位信息	名称(加盖公章)	
	地址	
	电话	

品牌: JOYO
名称: 放大器
制造商: 深圳市卓乐科技有限公司
地址: 广东省深圳市宝安区28区新安三路陆氏工业大厦2楼
邮编: 518133
售后服务热线: 0755-29765390
执行标准: Q/ZYKJ 008-2022

产品合格证

检验结论: 合格
检验员号: QC 01
日期: _____

JOYO

www.joyoaudio.com

Mic Preamplifier

DM-5 Owner's manual




I .Important Notes

- 1.Do not disassemble or repair this product by yourself.
- 2.Do not use or store it to any heat sources, damp,dusty areas. Avoid violent vibrations or shock.
- 3.Do not drop this product otherwise it may malfunction.
- 4.Do not use alcohol or other cleaning fluids to clean this product.

II .Parameters

Frequency range: 10Hz-40kHz(±0.3 dB)
Gain: 20-30 dB(Load1KΩ)
The MAX Output Level(0.5%THD): 4.5 dBV(2.6 V)
Output Noise Level: 10μV(JIS-A)
Power:48V, according to IEC 61938
Electrical Impedance: 135Ω
Recommended Load Impedance: >1KΩ
Current consumption: 2.9mA
Connectivity: 3-Pin Male/Female XLR connector
Dimensions: Diameter:19mm
Length: 95.5mm
Weight: 80g
Attached accessory: owner's manual

III、Diagrams and introductions

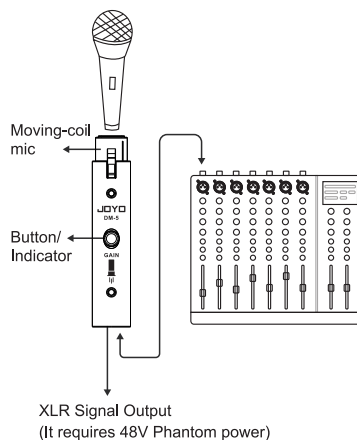

* You can switch the Gain by clicking the button, the indicator's color indicates the current Gain. It means 20dB when it's in green, while it means 30dB when it's in blue.

Power

To guarantee normal operation, DM-5 requires a 48V phantom power according to the IEC 61938.



Risk of damage

Don't connect DM-5 to any power supply other than phantom power source(input with phantom power or the external IEC standard phantom power supply), use a balanced cable with studio grade connectors comply with IEC 268-12 only. This is the only way to make sure safe and reliable operation.

Safety & Maintenance



Risk of damage

Pls ensure that the devices DM-5 connected to comply with the safety regulations of your country, and with ground wire.

This product complies with the standards listed in the Declaration of Conformity. Technical data subject to change without any further notice.



JOYO

JOYO TECHNOLOGY CO.,LTD

Address: 2/F, Lushi Industry Building, 28th District, Bao'an, Shenzhen, 518101 China.
www.joyoaudio.com Email:info@joyoaudio.com
Tel: 0086-755-29765381