




# Prefix Plus-T Onboard Preamp Cutout Template

**CAUTION: Print at 100% (full size)  
or set Page Scaling to "none"**

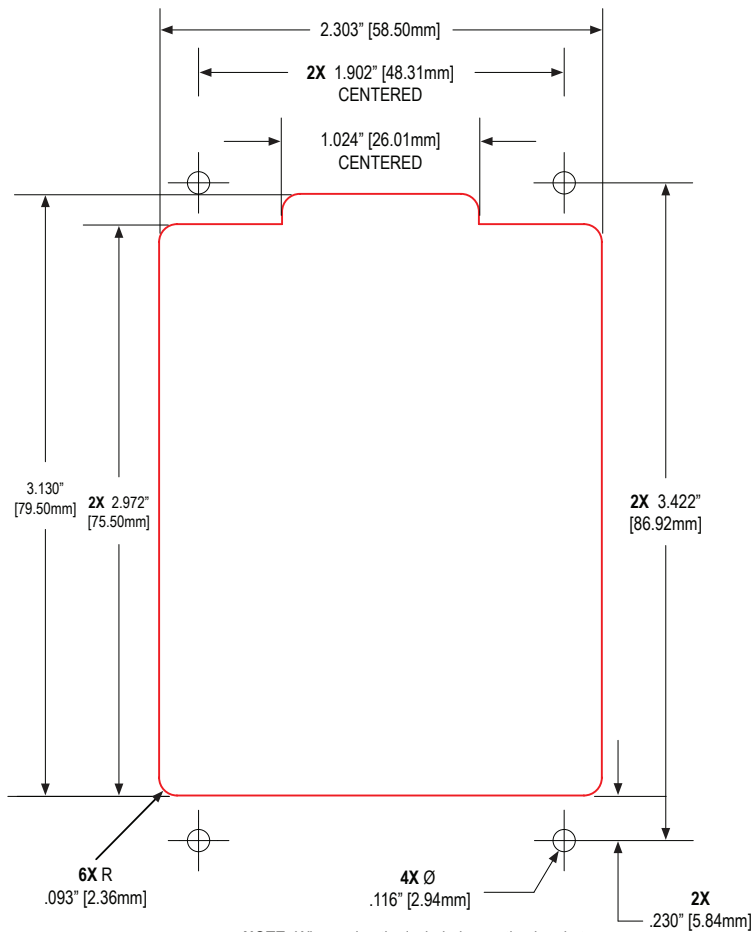

**NOTE:** When using the included mounting brackets, screw holes should be .116" [2.94mm] as shown.

When not using the included mounting bracket, drill an appropriately sized pilot hole.

520-001-005\_r1