




Prefix Pro Blend & Aura Pro Onboard Preamp Cutout Template

**CAUTION: Print at 100% (full size)
or set Page Scaling to "none"**

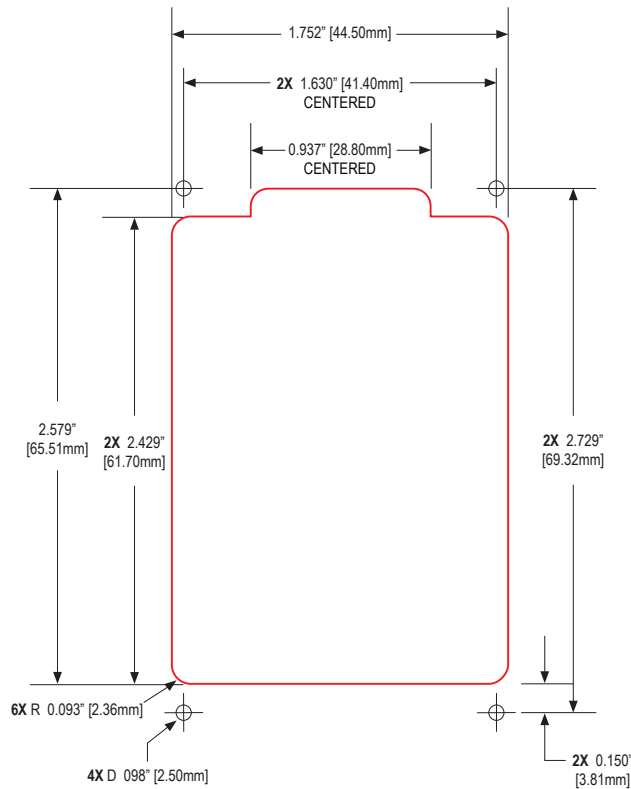

NOTE: When using the included mounting brackets, screw holes should be .098" [2.50mm] as shown.

When not using the included mounting bracket, drill an appropriately sized pilot hole.

009-089-001_r4